


**Brookville Mining Equipment Corporation**  
**Product Information Bulletin 59 (02-12-04)**  
**Brookville MC or Hub City Gearbox**  
**Axle End Cap Security**

**Purpose:**

The axle end cap is fastened to the end of the axle at the gearbox. This end cap prevents the axle key from falling out and therefore allowing the gearbox to spin on the axle. This end cap needs to be periodically checked for security and replaced immediately if missing.

**Action:**

Brookville recommends a weekly check of the axle end cap be added to the machines maintenance schedule. Inspect the security of the end cap bolt and end cap. In the event the end cap is missing, check for the presence of the axle key. If present, replace the end cap **IMMEDIATELY**. If the axle key is missing further action must be taken to be sure the gearbox is properly aligned on the axle shaft and the axle key and end cap replaced **IMMEDIATELY**.

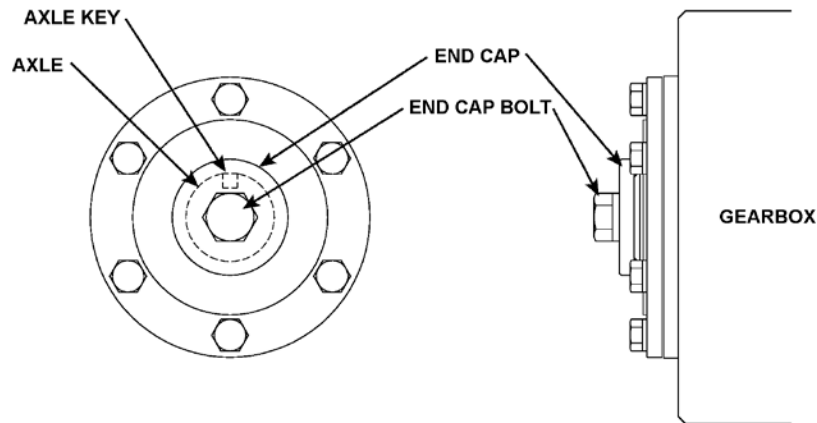

If further information is desired, please contact Brookville Equipment Corporation at (814) 849-2000.